



Handle Replacement Instructions

1. Using a drill driver, carefully drill through the head of each rivet holding the Handle to the case. Apply enough pressure to remove material. Too much pressure will cause the rivet to spin in place which can melt the plastic mounting plate and case. [A video tutorial for removing rivets can be found here.](#)
2. Remove the old Handle.
3. Position the new Handle to confirm the holes align properly.
4. Insert four new rivets into each hole on the Handle.
5. Place a washer on the post of each rivet.
6. Use a manual rivet gun to set each rivet. Inexpensive manual rivet guns can be purchased at local hardware stores or [online](#). Most rivet guns can set a variety of rivets sizes. Your Craft-n-Go case has both 1/8" and 3/16" sized rivets. [A video tutorial for setting rivets can be found here.](#)
7. Your Handle is now successfully installed.

Special Instructions for Standard and XL Craft-n-Go Cases: the Handles of these sizes are mounted below the tray of your Craft-n-Go case which is glued into place. DO NOT ATTEMPT TO REMOVE YOUR TRAY. You will need to follow these additional instructions for replacing your handles.

1. Using a 1/2" drill bit on a drill driver, drill four holes in the tray that align with the rivet mounting locations of the handle you wish to replace. If you own larger drill bits, it is possible to drill one larger hole for each pair of rivet locations.
2. Use these access holes to install the washer on the posts of the rivets in Step 4 above. A long tweezers or needle nose pliers will aid in successfully installing the washer on the post of the rivet.
3. After replacement you will have permanent holes in your tray which can be covered with tape.